


Operation Procedure of Rice Husking & Milling Machine

Dap Fan Case	Paddy Hulling Fan	Husking Tank Shutter
		

Note: If you open the shutter of the husking tank before starting husking, the paddy rice will be stuck in the dap fan!

Please be sure to follow the following procedure when you start operation of the machine:

1. Check if "the shutter is closed" in the hull-feeding tank.

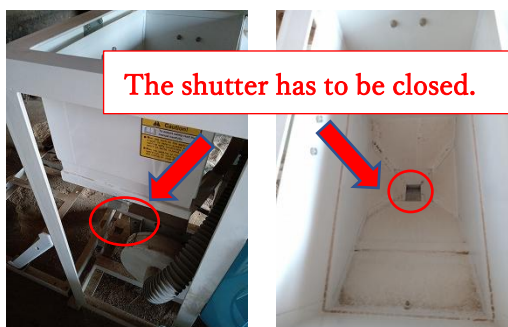

2. Make sure that there is no residue in dap fan case.



3. Start the engine.



4. Measure with a tachometer and adjust revolutions (1450 or a little above).

You can mark with a sticker to set the lever to the proper engine RPM.



5. Pour paddy rice into the tank.



6. Open the shutter of the hull-feeding tank gradually to start hulling.



You can pull the lever to open.



7. In case that the paddy rice in the tank finishes, or you want stop engine, please close the shutter before stopping engine. (Stop the engine "after closing the shutter" of the hull-feeding tank.)

Close the shutter before engine stop!



Note: This engine drive milling machine doesn't have circuit breaker, so the engine continues to run, even when the paddy is stuck in Dap Fan Case.